

Marquee Maps

Version 1.0

7/17/2025

© 2025 ADVANCED NETWORK DEVICES

3820 NORTH VENTURA DR.

ARLINGTON HEIGHTS, IL 60004

U.S.A

ALL RIGHTS RESERVED



Proprietary Notice and Liability Disclaimer

The information disclosed in this document, including all designs and related materials, is the valuable property of Digital Advanced Network Devices and/or its licensors. Advanced Network Devices and/or its licensors, as appropriate, reserve all patent, copyright and other proprietary rights to this document, including all design, manufacturing, reproduction, use, and sales rights thereto, except to the extent said rights are expressly granted to others.

The Advanced Network Devices product(s) discussed in this document are warranted in accordance with the terms of the Warranty Statement accompanying each product. However, actual performance of each product is dependent upon factors such as system configuration, customer data, and operator control. Since implementation by customers of each product may vary, the suitability of specific product configurations and applications must be determined by the customer and is not warranted by Advanced Network Devices.

To allow for design and specification improvements, the information in this document is subject to change at any time, without notice. Reproduction of this document or portions thereof without prior written approval of Advanced Network Devices is prohibited.



Static Electric Warning

TROUBLESHOOTING AND ADDITIONAL RESOURCES

User Support: Technical Resources: AND Legal Disclaimer: https://www.anet.com/user-support/ https://www.anetd.com/user-support/technical-resources/ https://www.anetd.com/legal/







OVERVIEW

The IPCSHD-L utilizes a marquee bar equipped with a 112x8 RGB LED matrix. This bar is completely customizable and capable of displaying everything from basic images to your company logo. This document will outline the ways to create a marquee map and configure your devices with them.

CREATING THE MARQUEE MAP

The easiest way to create a Marquee Map is using ClockWise's LED Graphic Editor. ClockWise Campus is our proprietary software and can be downloaded from our customer portal. With ClockWise running, navigate to the web interface by entering "localhost:44490" into the address bar of your web browser or double clicking on the green light next to "Web Interface" in the desktop application.

Once in the web interface, navigate to "Admin" on the left panel, then to the button labeled "LED Graphic Editor"

Opening this will bring you first to the Pixmap editor for Gen 2 LED devices. Click on "Marquee Map" at the top to switch to the editor for Marquee Maps.



Editor

LED Graphic Editor	
Piznap Marquee Map	ew on Endpoint(s) Selected:
Manquee Bar v Color:	Reset
	112x8

The Graphic Editor can be used to draw out a Marquee Map in much the same way as digital art software like Microsoft Paint. You can preview the current look of your Marquee Map by first selecting "Endpoint(s) Selected" at the top of the page, select the IPCSHD-L to display the Marquee Map on, then click the button next to "Preview on Endpoint(s) Selected"

Once your Marquee Map is complete, hit the "Save" button to save it to the ClockWise machine.

In order to permanently display the Marquee Map on your device, we will need to first export the frame data. To do this, hit the "Export" button, then copy the frame data from the resulting window.

	Frame 1*						
Manage Files	Load	Save	Export				







USING MARQUEE MAPS

With a file saved to the ClockWise machine and the frame data exported, we can now use the Marquee Map.

Marquee Maps can be used in two ways: a Marquee Banner can be configured to display continuously during device operation or a Marquee Map can display temporarily as part of a notification. A configured Marquee Banner will appear whenever the device boots as well as reappear at the end of any notification that includes a Marquee Map.

CONFIGURING A BANNER USING THE WEB INTERFACE

When not using configuration files, we can use the device web interface to configure the Marquee Banner.

Navigate to Device Settings > Display, then locate the setting for "Marquee Banner" and paste the exported frame data into the text box as shown below:

_	Hom	ie	Device Status	_	SIP Status	Conf	ig File Status	Devic	e Settings		
General	Audio	Display	Network	SIP	Servers	Firmware	Peripherals	Streams	Priorities	Onboard	XML
					_						
					p0	000009F000	0BF0000vFF00	00BF000097	0000hu0000	00425FA27F	8067oF

		p0000009F0000BF0000vFF0000BF0000970000hu000000425FA27F8067oF
		CC905C9A209365FACj000000i3662ADFFCB05DBAF076E8079iFFCB05DEB1
		043366B0D0B124FFCC047F8C71iEEC213B29922326BB1557B94iFFCB0571
		846DiFFCC033971AAj0000001559984179A7iFDCB04AD9A29336599j2F74
		B6t0000009F0000BF0000vFF0000BF0000970000hu000000173E753C5BA7
		lFFCB05i9B9158iFFCB0544659Ek0000003A65AAFFCB04E2B506jFFCB053
		466AF647C80FFCB053A68AC000000878F6BFCCA073068B42849838C9565i
		FFCB05AB982BiFFCB056C84730000003A68ACj3D70ABiFECB04D8AD062B7
Marquee Banner	-	2B8A6A750FAC705E4B3013176B5r0000009F0000BF0000nFF0000i252525
-		lFF0000k3C3C3Chu000000134F873A5D9BA19652D2B12AjFFCB05i000000
		738576FFCB054164A13A68AC3360AF3A68ACi3863ADkFFCC043565AE0000
		00B7A334FECB053A68AC5B7A8FFFCC03j3068B3D8B9261FFCB059D933B2B
		6DB8C7A81DB5A136D5AA064B7A96BFB03BiFFCB052971BBiECC3158F944E
		s0000009F0000BF0000mFF0000252525iFFFFFF252525k3C3C3CiFFFFFFi
		C5C5C5hv0000000661A2i3B5BA7jFAC9098D844E00000082836CF8C70437
		60ACA1964AiBDA73AEEBE0682855CB3A444iFFCB056A7D783365AF3A68AC
		8C8D59FFCB05CDA710FECB055A7886EBBF11CCA409356CAE9C9C581FFCB0
		· · · · · · · · · · · · · · · · · · ·

Click "Save and Apply" to save the settings and begin displaying your Marquee Banner

CONFIGURING A BANNER USING CONFIGURATION FILES

When using Configuration files, a marquee banner can be configured with the following lines:

```
<Display
marquee_banner="{FRAME DATA}"
/>
```

Replace {FRAME DATA} with your exported frame data. If you already have a <Display> tag, add the *marquee_banner* variable within it.

